




Power Box Instruction Sheet

 
WARNING: Installation of this product should be performed by a Licensed Electrician. Before you begin, please ensure the placement of the Power Box is within 4 - 5 feet of your motor. Any alteration to this electrical box will NULL and VOID the warranty.

Installing Your Power Box

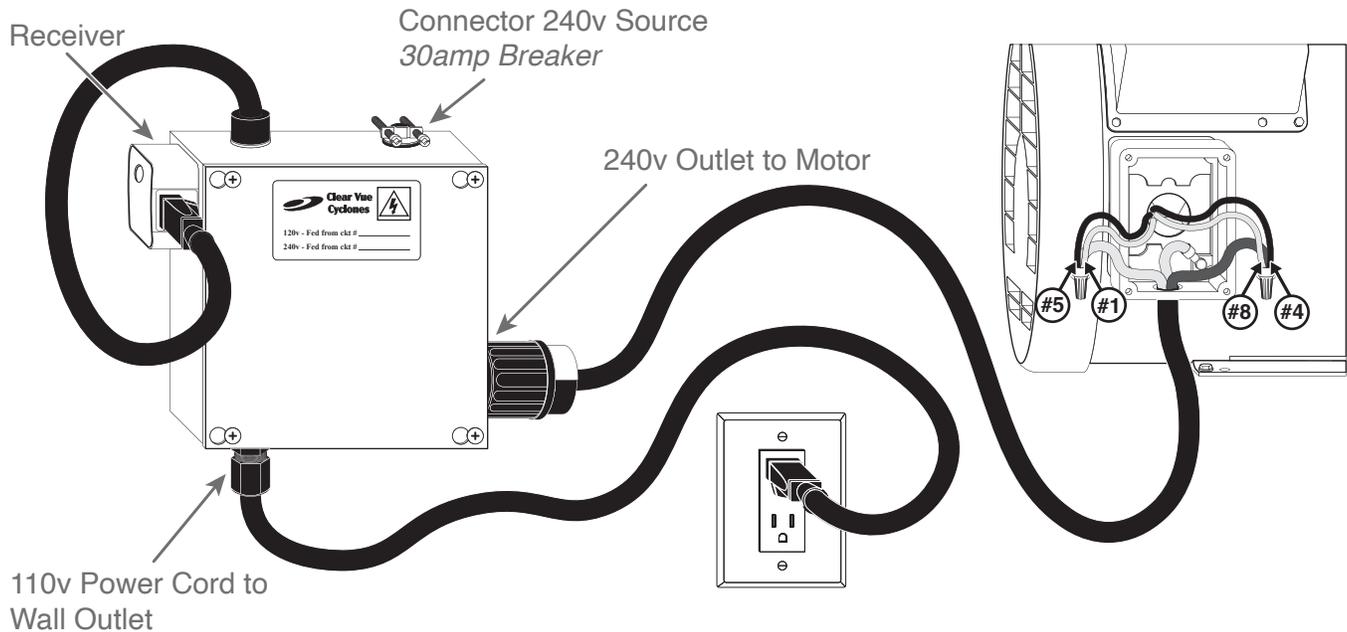

1. Wire the pigtail to the motor. For instructions, refer to the section on “Electrical - Single Phase Motors” within the Installation Guide that came with your system.
 - a. The #1 and #5 wires on the motor connect to the black wire on the pigtail.
 - b. The #8 and #4 wires on the motor connect to the white wire on the pigtail.
 - c. The green wire on the pigtail is grounded to the motor.

You are wiring according to the Opposite Standard configuration graphic found on the body of the motor (referenced below).



2. Open the cover of the Power Box by loosening the (4) screws that secure it in place and sliding the cover up and then off.
3. Secure the Power Box to your wall using the (4) pre-dilled holes on the back of the box (hardware not included).

4. Hardwire the 240v power from your panel to the relay inside the box, using the knockout opening on the top of the box:
 - a. Secure the hot leads - one each - to each of the terminal pins on the top of the relay. Please note the leads are interchangeable.
 - b. Secure the ground wire into the top position on the grounding bar.
5. Install the 110v receiver:
 - a. Plug the receiver into the 110v outlet on the side of the box.
 - b. Plug the 110v power cord from the top of the box into the side of the receiver.
 - c. Plug the 110v power cord from the bottom to a separate 110v Outlet.
6. Plug the pigtail from your motor into the 3-wire 240v outlet on the side of the box.

Pairing Your Receiver and Remote

Your receiver and remote have come paired by the manufacturer prior to shipment. Pairing is saved for one year without power supply, but on occasion receivers/remotes do need to be paired again upon receipt.



Please note there is a small protective tab that must be removed from the battery compartment of the remote prior to use.

1. Clear previous pairings from the receiver memory:
 - a. Press and hold the power button on the receiver for 5 seconds until the LED indicator begins to flash slowly.
 - b. Press and hold the power button on the receiver for an additional 5 seconds until the LED indicator begins to flash rapidly.
 - c. Press the power button on the remote to confirm pairing has been removed.
2. Pairing the receiver and the remote:
 - a. Press and hold the power button on the receiver for 5 seconds until the LED indicator begins to flash slowly, indicating pairing mode has been activated.
 - b. Press the "ON" button, then "OFF" button on your remote to complete the pairing process.
3. Multiple remotes can be paired with the receiver by repeating steps 1 and 2 above.



In the event that you lose your remote, the system can be turned on and off using the button on the receiver.



Frequency conflicts can occur with the receiver with other wireless devices in the area operating on the same frequency. As a safety precaution, we recommend unplugging the 230v pigtail from the outlet at the end of the day to prevent accidental powering.